 
 



## 01 Crestron Control Panel

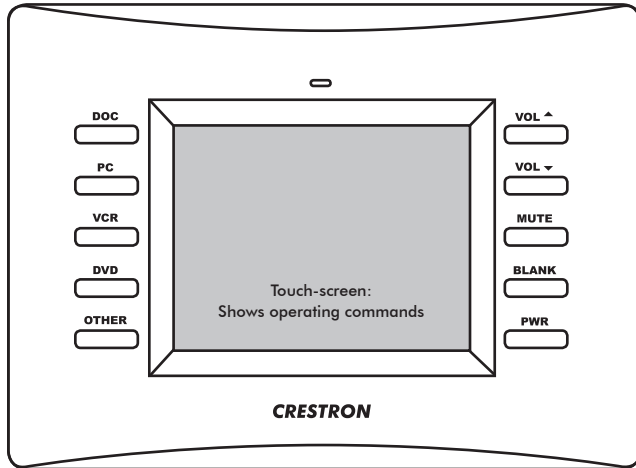


### Document Camera Commands

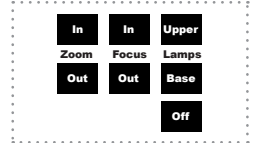
 
### VCR Operating Commands

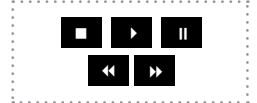

### DVD Operating Commands

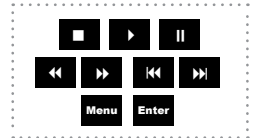 

### Source Preview Monitor



The source preview monitor is placed to the right of the control panel. It shows a preview of the document camera, VCR or DVD inputs. Please refrain from changing the settings of the source preview monitor.

## 02 Powering System On

- If the touch-screen shows no image, touch it once to activate it.
- Press the <PWR> button to power on the Crestron A/V System. It will take 1-2 minutes for the system to turn on.
- When the system powers on, you will be prompted to select the projection destination: "SCREEN" (drop-down screen in the corner) or "WALL" (whiteboard on the front wall). Depending on the destination where you wish to project, touch the "SCREEN" or "WALL" command.

## 03 Connecting a Computer

- Plug the VGA cable into the VGA Output of the computer, before turning it on.
- If you plan to play sounds via your computer, plug the audio cable attached to the VGA cable in your computer's audio (or headset) output jack.
- If you do not see the VGA and audio cables on the desk, please check in the lid-covered well.

## 04 Selecting Input

- Input source buttons appear on the left side of control panel screen: <DOC> (document camera), <PC> (computer), <VCR>, <DVD>, <OTHER> (any source connected to the video cable).
- Press an input source button to project the desired input. It may take a few seconds for the source to change.

## 05 Setting Projection Mode

- The projector in this room can be rotated. You can choose to project on the screen (located in the corner of the room) or on the whiteboard.
- To set the projection mode, touch the <PROJ MODE> button located in the bottom-left corner of the Crestron screen. Select "SCREEN" (corner) or "WALL" (front) projection mode. The projection mode prompt will disappear after you make a selection.

## 06 Operating VCR & DVD

- When <VCR> or <DVD> input sources are selected, operating commands for the built-in VCR and DVD players appear on the screen (see illustrations above). You can also use the controls on the VCR/DVD player.

## 07 Operating the Document Camera

- When the <DOC> input is selected, operating commands for the document camera will appear on screen. (You can also use the controls on the document camera device.)
- You can adjust zoom and focus by touching and holding the respective <In> or <Out> commands.
- You can turn on the upper or base lamps by touching <Upper> or <Base> next to "Lamps". Only one of the lamp types can be lit at a time. Touch <Off> to turn off the lamps.

## 08 Adjusting Volume

- Use <VOL ▲> (volume up), <VOL ▼> (volume down) and <MUTE> to adjust the volume of the selected input source.
- Press one of the above buttons and hold it if necessary to increase or decrease volume. You may have to increase the volume to 75% to hear it.

## 09 Powering System Off

- Press <PWR> to power off the system. You will be prompted with "Are you sure you want to shut down?" Select "YES".
- You will not be able to turn it on again until the system shuts down completely (1-2 minutes).
- TIP: It is recommended that you power off the system at the end of your class session.