 
 



01 Crestron Control Panel

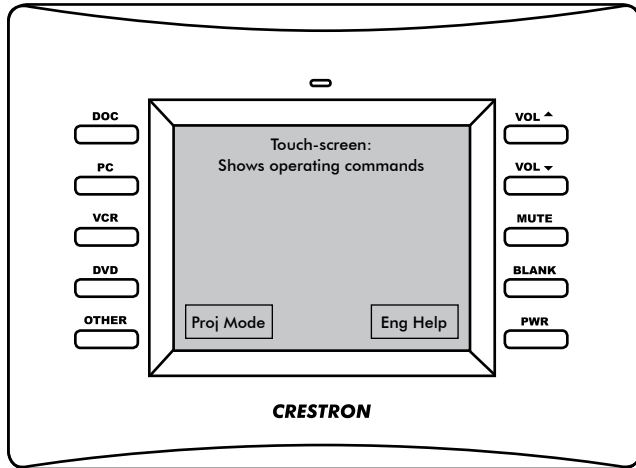


Document Camera Commands

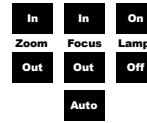

 VCR Operating Commands



DVD Operating Commands

 

Source Preview Monitor



The source preview monitor is placed to the right of the control panel. It shows a preview of the document camera, VCR or DVD inputs. Please refrain from changing the settings of the source preview monitor.

02 Powering System On

- If the touch-screen shows no image, touch it once to activate it.
- Press the <PWR> button to power on the Crestron A/V System. It will take 1-2 minutes for the system to warm up.
- If the projector is pointed toward the whiteboard instead of the screen (or vice versa), see section 05 Adjusting Projection.

03 Connecting a Computer

- Plug the VGA cable into the VGA Output of the computer, before turning it on.
- If you plan to play sounds via your computer, plug the audio cable attached to the VGA cable in your computer's audio (or headset) output jack.
- If you do not see the VGA and audio cables on the desk, please check in the lid-covered well.

04 Selecting Input

- Input source buttons appear on the left side of control panel screen: <DOC> (document camera), <PC> (computer), <VCR>, <DVD>, <OTHER> (any source connected to the video cable).
- Press an input source button to project the desired input. It may take a few seconds for the source to change.

05 Adjusting Projection

- The projector in this room can be rotated. You can choose to project on the screen (located in the corner of the room) or on the whiteboard.
- To set the projection mode, touch the <Proj Mode> button located in the bottom-left corner of the touch-screen. Select "Screen" or "White Board" projection mode.
- The projection screen can be rolled UP or DOWN via the respective buttons on the Projector Mode prompt.
- Touch <RETURN> to exit the Projector Mode prompt.

06 Operating VCR & DVD

- When <VCR> or <DVD> input sources are selected, operating commands for the built-in VCR and DVD players appear on the screen (see illustrations above). You can also use the controls on the VCR/DVD player.

07 Operating the Document Camera

- When the <DOC> input is selected, operating commands for the document camera will appear on screen. (You can also use the controls on the document camera device.)
- To adjust zoom and focus, touch and hold the respective <In> or <Out> commands.
- To switch on the document camera lamps, touch <On> above "Lamps". Touch <Off> to switch them off.

08 Adjusting Volume

- Use <VOL ▲> (volume up), <VOL ▼> (volume down) and <MUTE> to adjust the volume of the selected input source.
- Press one of the above buttons and hold it if necessary to increase or decrease volume. You may have to increase the volume to 75% to hear it.

09 Powering System Off

- Press <PWR> to power off the system. You will be prompted with "Are you sure you want to shut down?" Select "YES".
- You will not be able to turn it on again until the system shuts down completely (1-2 minutes).